


TWINLIGHT

24 Shanahan pde.
Redbank Plains, Qld.
Ph.: 07 3814 4078
Mobile: 0417 190 638
Fax: 07 3814 5768
Email: twinlight@bigpond.com

Instructions for fitting headlights to EA, EB, ED

- 1: Remove front covers and paint.
- 2: Remove adaptor brackets from new lights, (part B)
- 3: Remove existing headlights from car, including captive nuts in radiator support panel, (c)
- 4: Fit adaptor bracket (B) to car
- 5: Fit your existing indicators to the new lights, temporarily fit front covers to align indicators before securing.
- 6: Fit lights to car.
- 7: Aim headlights before fitting front covers. (Center of lights level at 3 meters)

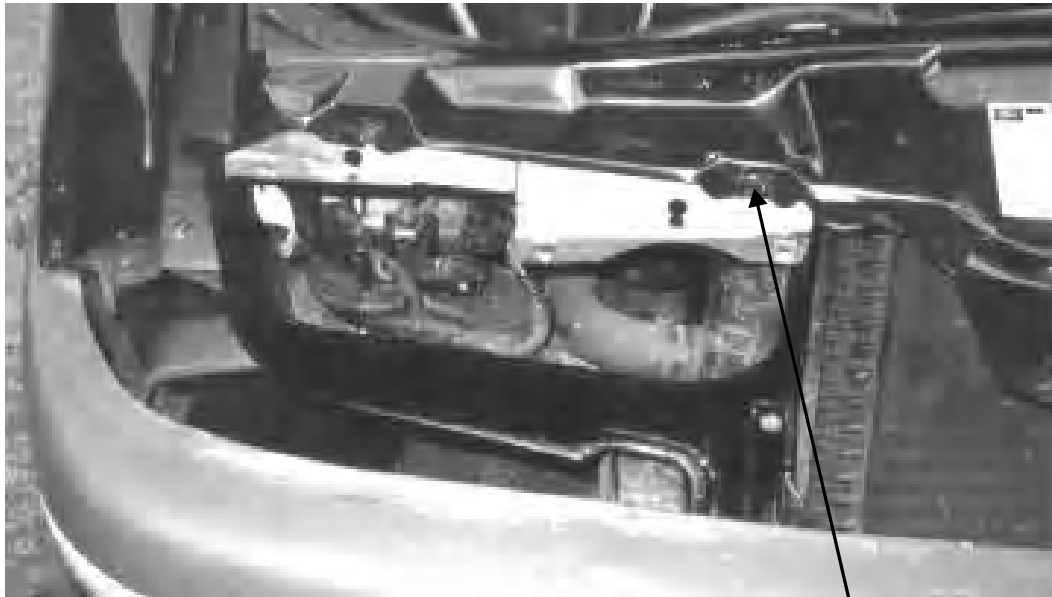

C
Captive nuts



B
Adaptor bracket